

Controller(brake release)

When in tight quarters, we always recommend releasing the electronic brake and pushing your cart.

You can disable the electronic brake from your remote or by powering off your Club Booster on the Console. To disable from the remote: press and hold the "Stop" button for 4 - 5 seconds. The red LED on the controller will start to blink. The electronic brake is now disabled, and you may push the cart without resistance.

To go back to normal mode, press any button on the remote.

